

Welcome...

to your new Motorola CT50 Corded Telephone!

- 10 two-touch memory keys for easy dialling.
- Redial to easily dial the last number called.
- Tone dialling.
- Mute your caller so you can have a private conversation with someone nearby.
- LED indicator shows when mute is activated.
- Ringer volume switch.
- Recall for network functions.
- Wall mountable for space efficiency.

Need help?

If you have any problems setting up or using your CT50, please contact Customer Services on xxxxxxxxxxxx. Alternatively, you may find the answer in the 'Help' section at the back of this guide.

This user guide provides you with all the information you need to get the most from your phone.

To set up your phone, follow the simple instructions in 'Getting Started'.

IMPORTANT

Only use the telephone line cord supplied.

Got everything?

- Corded handset and curly line cord
- Corded base
- User guide

For a better tomorrow
We make every effort through our design, research, engineering and supply chain management to make better products for everyone, focusing on both social and environmental responsibility.

The right thing to do.

- Meets and/or exceeds EMEA environmental regulatory requirements.
- Eco friendly packaging with a minimum 20% post consumer recycled content.
- Phone housing is built with a minimum of 25% post consumer recycled content plastic.

1.	Getting started	5
2.	Getting to know your phone	6
3.	Using the phone.....	8
3.1	Calls	8
3.1.1	Make a call	8
3.1.2	End a call	8
3.1.3	Receive a call	8
3.2	Mute.....	8
3.3	Redial.....	8
3.4	Recall.....	8
4.	Memory	9
4.1	Store a two-touch number	9
4.2	Dial a two-touch number	9
4.3	Delete a two-touch number.....	9
5.	Help.....	10
6.	General information	11
7.	Wall mounting.....	15

1. Getting started

IMPORTANT

 
Do not place your CT50 in the bathroom or other humid areas.

Location

You need to place your CT50 base within 2 metres of the telephone wall socket so that the cable will reach. The socket-outlet should be installed near the equipment and should be easily accessible.

If you are wall mounting your phone please refer to the wall mount template on page 15.



Connecting the handset

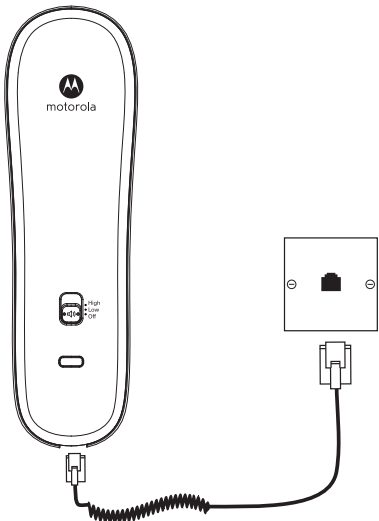

1. Plug one end of the curly line cord into the socket on the handset and the other end into the telephone wall socket.

2. Getting to know your phone

  Overview of the handset

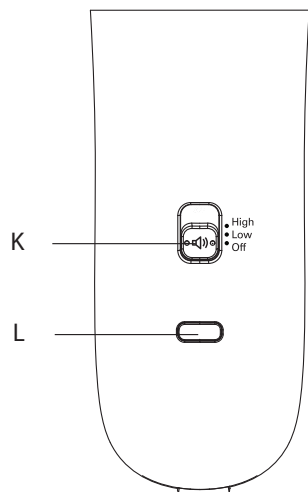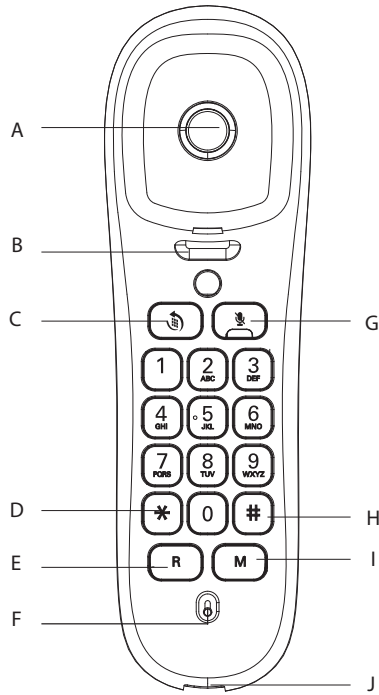

- A Earpiece
- B Hook switch
Hangs up a call when pressed or when you replace the handset.
- C Redial
Press to redial the last number called.
- D *
Dial a *.
- E R
Recall used with switchboards / PABX.
- F Microphone
- G Mute
Speak to someone nearby without your caller hearing the conversation. Lights up when mute is activated.
- H #
Dial a #.
- I Memory
For storing and dialling numbers in the two-touch memory.
- J Curly line cord socket
- K Ringer switch
Switch the ringer volume between high, low and off.
- L Ring indicator LED
Flashes to indicate an incoming call.

3. Using the phone

3.1 Calls

3.1.1 Make a call

Lift the handset, when you hear the dial tone, dial the number.

3.1.2 End a call

Place the handset back on the base.

3.1.3 Receive a call

Lift the handset to answer the call.

3.2 Mute

You can mute your handset so that you can talk to someone nearby without your caller hearing.

1. During a call, press . The LED will light up.
2. Press again to resume your call. The LED will turn off.

3.3 Redial

The last entry dialled is stored in the phone; the number can be up to 32 digits long.

To redial the last entry called, pick up the handset and press r .

3.4 Recall

Recall is useful to access certain network services and PABX /switchboard services.

For more information about network services contact your network operator.

The recall mode preset in the CT50 is suitable for your country network.

4. Memory

You can store one of your most frequently used telephone numbers under each of the number buttons 0-9, the number can be up to 32 digits long.

4.1 Store a two-touch number

1. Lift the handset and press and hold until you hear a tone. The red LED on the mute button will flash.
2. Press one of the keypad buttons 0-9.
3. Dial the number to be stored.
4. Press .
5. Place the handset back on the base.

NOTE

Remember to make a note of which phone numbers are store under which keypad number on the label provided. You will need to remove the plastic plate so you can write on the card. Once you have made a note of the numbers replace the plastic plate.

4.2 Dial a two-touch number

1. Lift the handset.
2. Press .
3. Press one of the keypad buttons 0-9, where the number is stored.
4. The memory number will be dialled out.

4.3 Delete a two-touch number

1. Lift the handset and press and hold until you hear a tone. The red LED on the mute button will flash.
2. Press one of the keypad buttons 0-9.
3. Press .
4. Place the handset back on the base.

