



RG210 Getting Started manual

Thanks for choosing RG210 for your mobile phone, in order to provide better service to you, please read the user manual before using.

Note:

Water on screen will cause touch screen less sensitive or misoperation, please keep it clean and dry.

Start to use your phone:



1. Power button
2. Receiver
3. Light sensor
4. Menu key
5. Home key
6. Front camera
7. Touch screen
8. Back key
9. Microphone
10. I/O port, USB connector
11. PTT key
12. Volume key
13. Short cut key for camera(long press to switch)
14. Speaker
15. Rear camera
16. Screw

Insert SIM card and Micro-SD card:

1.Remove the battery cover, loosen the screws on the back side – to rotate both the screws anti-clockwise until open the back cover as shown below.



2.Take off the battery: remove the battery by lifting it up from the top part as shown below



3.Insert the SIM car to the slot as shown below.



4.Insert Micro-SD card, open Micro-SD card holder and insert Micro SD card into the slot, then close the holder as shown below.



5.Insert the battery to the phone: Insert the battery with the label side up. Align the tabs and metal contacts at the bottom of the battery with the tabs and contacts on the back of the phone. Slide into place and press down as shown.



6.Insert the battery cover, insert the back cover and rotate two screws clockwise to lock the back cover as shown below.



7.Charge the battery before using your device for the first time, please recharge the battery completely 12 hours.



8.To power your device on and off, press and hold power button for 1-2seconds.




Attention:

Make sure battery cover, screw, I/O port rubber are completely sealed for waterproof and dustproof.

Use USB storage:

Connect the phone with computer by USB cable, the computer will pop up the windows to let you install the phone USB driver. Choose USB connected, turn on USB storage to use the USB storage.

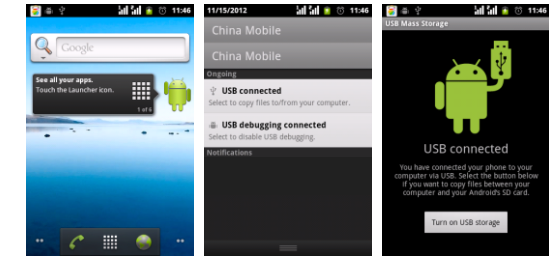


Remove the Micro-SD card safely:
SettingsSD card & phone storage unload SD card to remove the Micro SD card safely.
Remark: please turn off USB storage first before stop using, in case the data losing.

Use touch screen

Single click: to select an icon, for example, click dial to open the keypad which will be displayed on the screen.
Double click: to zoom-in or zoom-out, for example, to zoom in or out of a photo, click twice a photo or browsing on the internet.
Hold: click and hold the screen, icon or input box to get more operation options.
1) When clicking on a contact from the contact list for a long time, an operation menu will appear according to the contact list.
2) To move an icon to the home screen, click and hold an icon within the menu list.
3) Long-time click the blanks of home screen to add home screen shortcut. Drag the screen, you can drag the screen to view more applications which is not be displayed in one screen.


Home screen.

You can use all the functions by touch screen, click the icons to open the applications, check all the applications so it is functioning properly. Total there are five home screens in the phone, when you slide to the left or to the right this will move the screen from one to another. To create shortcuts and widgets, tap and hold at blank area on any of screen. Return to home screen by pressing the home key in any screen you are on.

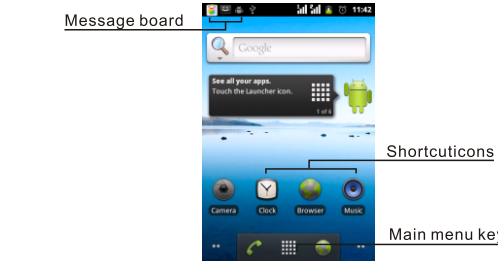


Create shortcuts and widgets

Press on the blank of the home screen, and hold till the menu is displayed. Select create shortcuts and widgets.

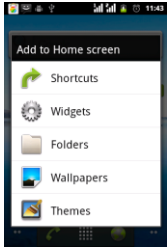

Delete the shortcuts and widgets

To delete an object, press and hold the object, then drag it towards the bottom of the screen. When the object turns red let go of it and the selected object will be deleted.

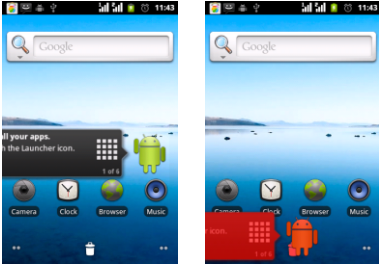


Lock the screen

Lock the phone in order to avoid useless operation and to save the battery by press the power key. The phone will automatically lock when it is not in use for some time.


Unlock the screen

 By short Press either the power key, and then slide the lock icon to unlock.




Silent mode

 Slide the silent mode icon to set the phone to silent mode, in silent mode, slide the silent mode icon to activate sounds.



Message board

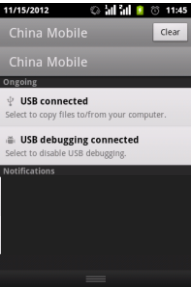

Slide message board bar in any screen to open message board where you are able to check for unread notifications.

Manage applications

Install applications, you can install .apk among file manager and set it up step by step.
Uninstall applications, enter settings applications manage applications, then will be manage and remove installed applications.

Extend the battery life

Some functions may use up more power, eventually short the battery life, you could:
---- close all the wireless connection when not in use i.e. Bluetooth, Wi-Fi or GPS.
---- reduce the brightness and shorten the screen timeout to save the battery, or press power key to shut down the screen when the phone is not in use.
---- Close any automatically synchronized applications such as E-mail, calendar, contacts and other.
Remark: some applications which are downloaded could also shorten the battery life.