



# motorola

Motorola VM34  
4.3" Video Baby Monitor



For: VM34, VM34-2, VM34-3 and VM34-4

## User Guide

# Welcome...

## *to your new Motorola Video Baby Monitor!*

Thank you for purchasing the Video Baby Monitor. Now you can see and hear your baby sleeping in another room or you can monitor your older children in their playroom.

Please keep your original dated sales receipt for your records. For warranty service of your Motorola product, you will need to provide a copy of your dated sales receipt to confirm warranty status. Registration is not required for warranty coverage.

For questions, warranty, support or service related to the product, please contact us by visit:

[motorolanursery.com/support](http://motorolanursery.com/support)

---

This User's Guide has all the information you need to make the most out of your product.

 
Please read the Safety Instructions on pages 8-9 before you install the unit.






### **Inside the Box**

- 1 x Parent Unit
- 1 x Baby Unit (Camera)
- 2 x Power adapter (Parent Unit and Baby Unit)
- 1 x Quick Start Guide

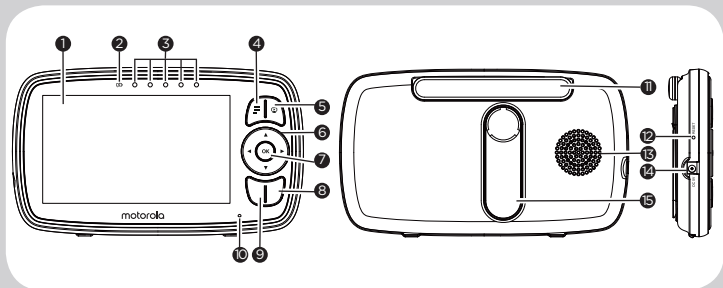




















In multi-camera packs, you will find one or more additional Camera Units with power adapters.

# Overview of the Parent Unit

 


- 1. Display (LCD screen)**
- 2. Parent Unit ON/OFF and Charging LED**  
Red when the parent unit is ON.  
Purple when electrical outlet connected.  
Blue when off and connected to electrical outlet.
- 3. Audio Level LEDs (Green, Green, Amber, Red, Red)**
- 4. MENU button**   
Press to open / close the Menu options.
- 5. VIDEO ON/OFF button**   
Press to turn the LCD screen ON/OFF (Note: audio is maintained.)
- 6. Navigation button**   
Move Up/Down/Right/Left menu options.
- 7. OK button**
- 8. Power button**  
Press and Hold to turn the Parent Unit ON/OFF .
- 9. TALK button**   
Press and hold to speak to your baby.
- 10. Microphone**
- 11. Antenna**
- 12. RESET button** (recessed - use small pin)
- 13. Speaker**
- 14. Power Socket**
- 15. Stand**

# Parent Unit menu icons

	Signal Level (5 Levels)
	Night Vision Mode (Video also changes to Black/White).
	Talk Mode On.
	Indicates the screen off timer is set.
	Volume Level Control (8 Levels).
	No Baby Unit detected.
	Battery Level Indication (4 Levels).
	Zoom Level Control (1X, 2X).
	LCD Brightness Level Control (8 Levels).
	Lullaby Control (5 Song Selections).
	Alarm Setting (6h, 4h, 2h, OFF) On status bar, indicates alarm set, and when flashing, that alarm time has been reached or missed.
	Temperature scale select (°C/°F) Readings display in BLUE, but turn RED if > 29 °C / 84 °F or < 14 °C / 57 °F. Displays HH °C / °F if >36 °C / 97 °F. Displays LL °C / °F if < 1 °C / 34 °F.
	Camera Control (scan  , view  , add  , del  ).
	Set Screen Off Timer (Off  , 5 mins, 30 mins, 60 mins).
	View multiple cameras on screen. Available when you have more than 1 Baby Unit (Camera).
	Information of Motorola Nursery App

# Overview of Your Baby Unit

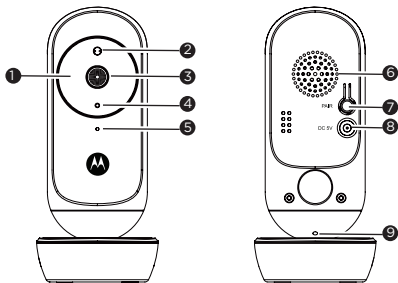

1. **Infrared LEDs** (x 8, for night vision)
2. **Photo Sensor** (Night Vision Mode)
3. **Camera Lens**
4. **Power/Link indicator**

5. **High Sense Microphone**
6. **Speaker**
7. **PAIR button**
8. **Power Socket**
9. **Temperature Sensor**

## Important guidelines for installing your Video Baby Monitor

- To use your Baby Unit and Parent Unit together, you must be able to establish a radio link between them, and the range will be affected by environmental conditions.
- Any large metal object, like a refrigerator, a mirror, a filing cabinet, a metallic door or reinforced concrete, between the Baby Unit and Parent Unit may block the radio signal.
- The signal strength may also be reduced by other solid structures, like walls, or by radio or electrical equipment, such as TVs, computers, cordless or mobile phones, fluorescent lights or dimmer switches.
- Other 2.4GHz products, such as wireless networks (Wi-Fi® routers), Bluetooth™ systems, microwave ovens or other Baby Monitors, may cause interference with this product, so keep the Baby Monitor at least 5ft (1.5m) away from these types of product, or switch them off if they appear to be causing interference.
- If the signal is weak, try moving the Parent and/or the Baby Unit to different positions in the rooms.

---

# Table of contents

---

<b>1. Safety Instructions</b> .....	<b>8</b>
<b>2. Getting Started</b> .....	<b>10</b>
2.1 Connecting the Power Supply for the Baby Unit .....	10
2.2 Connecting the Power Supply of the Parent Unit.....	10
2.3 Desktop Stand of the Parent Unit.....	11
2.4 Registration (Pairing).....	12
<b>3. Using the Baby Monitor</b> .....	<b>13</b>
3.1 Setting Up .....	13
3.2 Night Vision Mode.....	13
3.3 Talk Mode.....	13
3.5 Video ON/OFF .....	13
3.6 Temperature Display (HH °C / °F or LL °C / °F).....	14
<b>4. Parent Unit Menu Options</b> .....	<b>14</b>
4.1 Volume.....	14
4.2 Zoom .....	14
4.3 Brightness .....	14
4.4 Lullaby .....	14
4.5 Alarm.....	15
4.6 Camera Control.....	15
4.6.1 Add (pair) a camera.....	15
4.6.2 View a camera .....	16
4.6.3 Delete a camera.....	16
4.6.4 Scan camera.....	17
4.7 Temperature .....	17
4.8 Power Saving mode.....	17
4.9 View multiple cameras on screen .....	18
<b>5. Disposal of the Device (environment)</b> .....	<b>19</b>
<b>6. Cleaning</b> .....	<b>19</b>
<b>7. Help</b> .....	<b>20</b>

<b>8. General Information .....</b>	<b>22</b>
<b>9. Technical Specifications .....</b>	<b>28</b>

 
---

## 1. Safety Instructions



### WARNING:

Strangulation Hazard: Children have **STRANGLED** in cords. Keep this cord out of the reach of children (more than 3ft (1m) away). Never use extension cords with AC Adapters. Only use the AC Adapters provided.

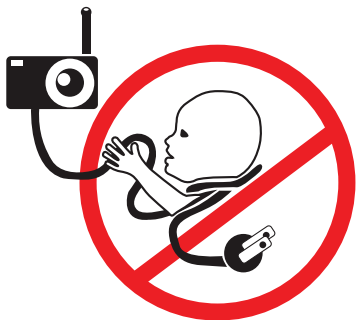



## Wi-Fi® CAMERA UNIT SET UP & USE:

- Choose a location for the Baby Unit that will provide the best view of your baby in his/her crib.
- Place the Baby Unit on a flat surface, such as a dresser, bureau or shelf, or mount the Baby Unit on a wall securely using the keyhole slots in the underside of the stand.
- NEVER place the Baby Unit or cords within the crib.

### **WARNING**

*This Baby Monitor is compliant with all relevant standards regarding electromagnetic fields and is, when handled as described in the User's Guide, safe to use. Therefore, always read the instructions in this User's Guide carefully before using the device.*

- Adult assembly is required. Keep small parts away from children when assembling.
- This product is not a toy. Do not allow children to play with it.
- This Baby Monitor is not a substitute for responsible adult supervision.
- Keep this User's Guide for future reference.
- Keep the cords out of reach of children.
- Do not cover the Baby Monitor with a towel or blanket.
- Test this monitor and all its functions so that you are familiar with it prior to actual use.
- Do not use the Baby Monitor in damp areas or close to water.
- Do not install the Baby Monitor in extreme cold or heat, direct sunlight, or close to a heat source.
- Only use the chargers and power adapters provided. Do not use other chargers or power adapters as this may damage the device and battery pack.
- Do not touch the plug contacts with sharp or metal objects.
- Connect the power adapters to easily accessible electrical sockets.
- The wall mounting height is less than 2m for the baby unit.

 
### **CAUTION**

*There is a risk of explosion if the battery is replaced by an incorrect type. Dispose of used batteries according to their instructions. Use only the rechargeable battery pack with rating: 3.7V 1200mAh.*

---

## 2. Getting Started

### 2.1 Connecting the Power Supply for the Baby Unit

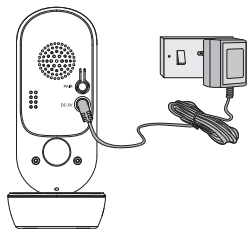


- Insert the DC plug of the power adapter into the DC socket on the back of the Baby Unit.
- Connect the other end of the power adapter to a suitable electrical outlet.
- The baby unit turns on and the power indicator lights in Blue colour.


#### **Note**

 *Only use the supplied power adapter (DC5V/1000mA).*


### 2.2. Connecting the Power Supply of the Parent Unit.

A rechargeable battery (Lithium ion battery 1200mAh) inside the Parent Unit allows you to move it without losing the link and picture from the Baby Unit. We recommend charging the for at least 16 hours before first use, and when the Parent Unit indicates the battery is low.

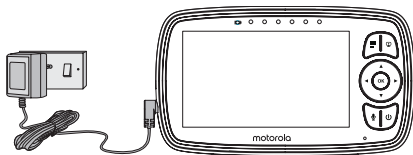


- 
- Connect the small plug of the power adapter to the parent unit and the other end to the electrical outlet. Only use the enclosed adapter (5VDC/1000mA).
  - Press and hold the  button to turn the Parent unit on, the Parent unit and Baby unit are automatically linked and ready to use.

**NOTE:**

 *When the Baby and Parent Units are both turned on and within range, the Parent Unit should show a color image from the Baby Unit camera, but if the room is dark, the image will be in black and white, with an  icon showing, due to the infra-red illumination by the Baby Unit.*

### 2.3. Desktop Stand of the Parent Unit

- The parent unit comes with a desktop stand attached to the back of the parent unit.
- To place the parent unit on a desk, simply pull out the stand, as shown.

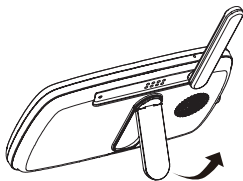

**NOTE**

*Place the parent unit on a flat, even surface.*

---

## 2.4 Registration (Pairing)

The Baby Monitor is pre-registered to your Parent Unit. You do not need to register it again unless the Baby Unit loses its link with the Parent Unit.

To re-register your Baby Unit, or register a new Baby Unit, follow the procedures below:

1. Press the **≡** button and the menu bar will pop up.
2. Press the **◀** LEFT button or **▶** RIGHT button until **📍** is highlighted, and the **✕ del/ + add/ 👁 view/ 🔄 scan** menu will pop up.
3. Press the **▲** UP button or **▼** DOWN button to select **+ add**, and press the **OK** button to confirm.
4. Camera **\*1 / 2 / 3 / 4** will pop up. Press the **▲** UP button or **▼** DOWN button to select the desired Camera, and press the **OK** button to start searching for a camera unit.

***Note:** If a camera is currently paired with the Parent Unit, its camera location (with a \* against it) cannot be selected for a new registration.*

5. Press and hold the **PAIR** button on the back of the Baby Unit until the Parent Unit finds the camera, beeps and **PAIR OK** appears on the screen. The video from the camera will then appear.

### **NOTE**

*A camera can only be registered to one Parent Unit at any one time.*

---

## 3. Using the Baby Monitor


### 3.1 Setting Up

Place the Baby Unit in a convenient location (e.g. on a table) and point the camera lens towards the area you want to monitor. Adjust the angle of the Baby Unit's camera until you are satisfied with the image shown on the Parent Unit.



#### **NOTE**

*Do not place the Baby Unit within the baby's reach! If there is interference with the picture or sound, try moving the units to different locations, and ensure they are not close to other electrical equipment.*


### 3.2 Night Vision Mode

The Baby Unit has 8 high-intensity infrared LEDs for picking up clear images in the dark. When the built-in photo sensor on the top of the Unit detects a low level of ambient light, the LEDs will automatically activate and the screen on the Parent Unit will display in black and white. The  icon will be displayed at the top of the screen.

### 3.3 Talk Mode

Press and hold the TALK button  on the Parent Unit to talk to your baby through the Baby Unit's loudspeaker. The  icon will be displayed at the top of the LCD screen.

### 3.4 Video ON/OFF

Press  VIDEO On/Off button to turn the LCD screen on or off, whilst still leaving the audio monitor on.

### 3.5 Temperature Display (HH °C / °F or LL °C / °F)

The temperature reading from the temperature sensor at the back of the Baby Unit will be displayed at the top of the LCD screen. The readings will turn RED if the temperature goes above 29°C / 84°F or below 14°C / 57°F. The reading will change to HH °C / °F if the temperature goes above 36°C / 97°F. The reading will change to LL °C / °F if the temperature goes below 1°C / 34°F.

---

## 4. Parent Unit Menu Options

### 4.1 Volume

Press the ◀ Left or ▶ Right button to adjust the volume level.

The 🔊 icon will pop up and you can select the desired volume from level 0-8. (The default volume level setting is level 5, and level 0 is OFF.)

### 4.2 Zoom

1. Press the ≡ button and the menu bar will pop up with highlighted.
2. Press the ▲ UP button or ▼ DOWN button to select 1X or 2X zoom. (The default setting is 1X.)

### 4.3 Brightness


1. Press the ≡ button and the menu bar will pop up.
2. Press the ◀ LEFT button or ▶ RIGHT button until 🌞 is highlighted.
3. Press the ▲ UP button or ▼ DOWN button to select the desired brightness from level 1 - 8. (The default brightness is level 4.)

### 4.4 Lullaby

1. Tap on ≡ button then Scroll Left/Right to select 🎵 option at the menu bar.
2. Press ▲ Up or ▼ Down button to view the desired song from the 5 lullabies available, or the cycle option to play all 5 songs in turn. (The default setting is lullaby OFF).
3. Press **OK** button to play the selected lullaby.
4. The volume level setting 🔊 will pop up,
5. Press ▲ UP button or ▼ DOWN button to select the volume level of audio playback.


---

## 4.5 Alarm

1. Press the **≡** button and the menu bar will pop up.
2. Press the **◀** LEFT button or **▶** RIGHT button until is  highlighted.
3. Press the **▲** UP button or **▼** DOWN button to select the alarm time (**6h, 4h, 2h**). (The default setting is Alarm **OFF**.)
4. If an alarm time is selected, the Parent Unit will beep for about 45 seconds after every 6, 4 or 2 hour period.

## 4.6 Camera Control

### 4.6.1 Add (pair) a camera

1. Press the **≡** button and the menu bar will pop up.
2. Press the **◀** LEFT button or **▶** RIGHT button until  is highlighted, and the **x del/ + add/ ⦿ view/ ↻ scan** menu will pop up.
3. Press the **▲** UP button or **▼** DOWN button to select **+ add**, and press the **OK** button to confirm.
4. Camera **\*1 / 2 / 3 / 4** will pop up. Press the **▲** UP button or **▼** DOWN button to select the desired Camera, and press the **OK** button to start searching for a camera unit.

**Note:** *If a camera is currently paired with the Parent Unit, its camera location (with a \* against it) cannot be selected for a new registration.*


















5. Press and hold the **PAIR** button on the underside of the Baby Unit until the Parent Unit finds the camera, beeps and **PAIR OK** appears on the screen. The video from the camera will then appear.

### **NOTE**

*A camera can only be registered to one Parent Unit at any one time.*

---






## 4.6.2 View a camera

1. Press the  button and the menu bar will pop up.
2. Press the  LEFT button or  RIGHT button until  is highlighted, and the  del/  add/  view/  scan menu will pop up.
3. Press the  UP button or  DOWN button to select  add, and press the **OK** button to confirm.
4. Camera   /  /  will pop up. Press the  UP button or  DOWN button to select the desired Camera, and press the **OK** button to view the picture from that camera.
















### Note:

Only camera locations with a \* can be selected.

### TIP

You can also press the **OK** button repeatedly to select the available camera options from  /  /  /  ,  scan.

## 4.6.3 Delete a camera

1. Press the  button and the menu bar will pop up.
2. Press the  LEFT button or  RIGHT button until  is highlighted, and the  del/  add/  view/  scan menu will pop up.
3. Press the  UP button or  DOWN button to select  del, and press the **OK** button to confirm.
4. Camera   /  /  will pop up, press the  UP button or  DOWN button to select the desired Camera, and press the **OK** button.
5. Press the  UP button or  DOWN button to select  , then press the **OK** button to delete that registration.

### NOTE
















You are not allowed to delete the camera if there is only one registered camera in the system.



---

#### 4.6.4 Scan camera







This function is only available when you have more than 1 Baby Unit (Camera).

1. Press the  button and the menu bar will pop up.
2. Press the  LEFT button or  RIGHT button until  is highlighted, and the  del/  add/  view/  scan menu will pop up.
3. Press the  UP button or  DOWN button to select  scan, and press the **OK** button to confirm.
4. The screen will then display images from different registered cameras in a loop of Camera     , changing about every 12 seconds.







#### TIP

You can also press the **OK** button repeatedly to select the available camera options from     ,  scan.

#### 4.7 Temperature

1. Press the  button and the menu bar will pop up.
2. Press the  LEFT button or  RIGHT button until  is highlighted.
3. Press **OK**, then  UP /  DOWN to select **°C** or **°F**.

#### 4.8 Power Saving mode

1. Press the  button and the menu bar will pop up.
2. Press the  LEFT button or  RIGHT button until  is highlighted.
3. Press the  UP button or  DOWN button to select auto video off after 5 mins, 30 mins or 60 mins (if operating on batteries only)..





#### NOTE

The audio will remain and you can press any key to switch the video back on.

---

## 4.9 View multiple cameras on screen

This function is only available when you have more than 1 Baby Unit (Camera). When the Split Screen function is On, you can view multiple cameras on the screen.

1. Press the  button and the menu bar will pop up.
2. Press the ◀ LEFT button or ▶ RIGHT button until  is highlighted.
3. Press ▲ UP button or ▼ DOWN button to select Split Screen On  / Off .
4. When the Split Screen function is On, you can press the ◀ LEFT button/ ▶ RIGHT button/ ▲ UP button/ ▼ DOWN button to switch between cameras to hear the audio from the selected camera.

---

## 5. Disposal of the Device (environment)

At the end of the product life cycle, you should not dispose of this product with normal household waste. Take this product to a collection point for the recycling of electrical and electronic equipment. The symbol on the product, user's guide and/or box indicates this.



Some of the product materials can be re-used if you take them to a recycling point. By reusing some parts or raw materials from used products you make an important contribution to the protection of the environment.

Please contact your local authorities in case you need more information on the collection points in your area.

The internal battery should be disposed of with the Parent unit in an environmentally-friendly manner according to your local regulations.

## 6. Cleaning

Clean the Baby Monitor with a slightly damp cloth or with an anti-static cloth. Never use cleaning agents or abrasive solvents.

### Cleaning and care

- Do not clean any part of the product with thinners or other solvents and chemicals – this may cause permanent damage to the product which is not covered by the warranty.
- Keep the Baby Monitor away from hot, humid areas or strong sunlight, and don't let it get wet.
- Every effort has been made to ensure high standards of reliability for your Baby Monitor. However, if something does go wrong, please do not try to repair it yourself – contact Customer Service for assistance.



### **IMPORTANT**

*Always switch off and disconnect the power adapter before cleaning your baby monitor.*

---

## 7. Help

### Display

- Try recharging the battery pack.
- Reset the Units. Unplug both the Units' electrical power, then plug them back in.
- Is the Unit switched on?
- Press and hold the ON/OFF button  on the Parent Unit for 3 seconds to switch it ON.
- Is the correct camera selected? Change the camera number, if necessary.
- Is the video display turned on? Press the VIDEO ON/OFF button  to turn it ON.
- When operating using batteries only, the display will go blank after 5 minutes or 30 minutes or 60 minutes to save power (depending on video settings). The Unit is still active and will give you audio alerts. You can reactivate the screen by pressing any button.

### Registration

#### ***If the Baby Unit has lost its link with the Parent Unit***

- If the Baby Unit is too far away it may be going out of range, so move the Baby Unit closer to the Parent Unit.
- Reset both the Parent Unit and Baby Unit by disconnecting them from the electrical power. Wait about 15 seconds before reconnecting. Allow up to one minute for the Baby Unit and the Parent Unit to synchronize.
- See 2.3 Registration (Pairing), if there is a need to re-register the Units.

### Interference

#### ***Noise interference on your Parent Unit***

- Your Baby and Parent Units may be too close. Move them further apart.
- Make sure there is at least 1 to 2m between the 2 Units to avoid audio feedback.
- If the Baby Unit is too far away, it may be out of range. Move the Baby Unit closer to the Parent Unit.

- 
- Make sure that the Baby and Parent Units are not near other electrical equipment, such as a television, computer or cordless/mobile telephone. Move the Baby Unit or Parent Unit 5 feet away from other electrical equipment.
  - Use of other 2.4 GHz products, such as wireless networks (Wi-Fi® routers), Bluetooth™ systems, or microwave ovens, may cause interference with this product. Keep the Baby Unit or Parent Unit at least 5 feet away from these types of products, or switch them off if they appear to be causing interference.
  - If the signal is weak, try moving the Parent and/or Baby Unit to different positions in the rooms.

### **Noise interference on your device**

- To avoid background noise or echoes, ensure that there is enough distance between your device and the Wi-Fi® Camera Unit.
- Use of other 2.4 GHz products, such as Bluetooth™ systems or microwave ovens, may cause interference with this product. Keep the Wi-Fi® Camera Unit at least 3 feet away from these types of products, or switch them off if they appear to be causing interference.

### **Lost connection**

- Check your Wi-Fi® settings. If necessary, reconnect your Wi-Fi®. Ensure that the Wi-Fi® Camera Unit is switched ON. Wait a few minutes to make the connection with the Wi-Fi® system.

---

## **8. General Information**

If your product is not working properly, read this Quick Start Guide or the User's Guide of one of the models listed on page 1.

Please visit us at: [motorolanursery.com/support](http://motorolanursery.com/support)

### **Consumer Products and Accessories Limited Warranty ("Warranty")**

Thank you for purchasing this Motorola branded product manufactured under license by Meizhou Guo Wei Electronics Co. LTD ("MZGW").

#### **What Does this Warranty Cover?**

Subject to the exclusions contained below, MZGW warrants that this Motorola branded product ("Product") or certified accessory ("Accessory") sold for use with this product that it manufactured to be free from defects in materials and workmanship under normal consumer usage for the period outlined below. This Warranty is your exclusive warranty and is not transferable.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY HAVE OTHER RIGHTS THAT VARY BY STATE, PROVINCE OR COUNTRY. FOR CONSUMERS WHO ARE COVERED BY CONSUMER PROTECTION LAWS OR REGULATIONS IN THEIR COUNTRY OF PURCHASE OR, IF DIFFERENT, THEIR COUNTRY OF RESIDENCE, THE BENEFITS CONFERRED BY THIS LIMITED WARRANTY ARE IN ADDITION TO ALL RIGHTS AND REMEDIES CONVEYED BY SUCH CONSUMER PROTECTION LAWS AND REGULATIONS. FOR A FULL UNDERSTANDING OF YOUR RIGHTS YOU SHOULD CONSULT THE LAWS OF YOUR COUNTRY, PROVINCE OR STATE.

#### **Who is covered?**

This Warranty extends only to the first consumer purchaser, and is not transferable.

---

## **What will MZGW do?**

MZGW or its authorized distributor at its option and within a commercially reasonable time, will at no charge repair or replace any Products or Accessories that do not conform to this Warranty. We may use functionally equivalent reconditioned/ refurbished/ pre-owned or new Products, Accessories or parts.

## **What Other Limitations Are There?**

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR OR REPLACEMENT PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL MOTOROLA OR MZGW BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT OR ACCESSORY, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS OR ACCESSORIES TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights that vary from one jurisdiction to another.

Products Covered	Length of Coverage
Consumer Products	<b>Two (2) years</b> from the date of the products original purchase by the first consumer purchaser of the product.
Consumer Accessories	<b>Ninety (90) days</b> from the date of the accessories original purchase by the first consumer purchaser of the product.
Consumer Products and Accessories that are Repaired or Replaced	<b>The balance of the original warranty or for Ninety (90) days</b> from the date returned to the consumer, whichever is longer.

## Exclusions

**Normal Wear and Tear.** Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

**Abuse & Misuse.** Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of MOTOROLA or MZGW, are excluded from coverage.

**Use of Non-Motorola branded Products and Accessories.** Defects or damage that result from the use of Non-Motorola branded or certified Products or Accessories or other peripheral equipment are excluded from coverage.

**Unauthorized Service or Modification.** Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than MOTOROLA, MZGW or its authorized service centers, are excluded from coverage.



---

**Altered Products.** Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola branded housings, or parts, are excluded from coverage.

**Communication Services.** Defects, damages, or the failure of Products or Accessories due to any communication service or signal you may subscribe to or use with the Products or Accessories is excluded from coverage.

## **How to Obtain Warranty Service or Other Information?**

To obtain service or information, please visit us at:  
[motorolanursery.com/support](http://motorolanursery.com/support)

You will receive instructions on how to ship the Products or Accessories at your expense and risk, to a MZGW Authorized Repair Center.

To obtain service, you must include: (a) the Product or Accessory; (b) the original proof of purchase (receipt) which includes the date, place and seller of the Product; (c) if a warranty card was included in your box, a completed warranty card showing the serial number of the Product; (d) a written description of the problem; and, most importantly; (e) your address and telephone number.

These terms and conditions constitute the complete warranty agreement between you and MZGW regarding the Products or Accessories purchased by you, and supersede any prior agreement or representations, including representations made in any literature publications or promotional materials issued by MZGW or representations made by any agent, employee or staff of MZGW, that may have been made in connection with the said purchase.

---

## FCC and IC regulations

### FCC Caution:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### IMPORTANT NOTE:

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

---

## ISED Warning

This device complies with Innovation, Science, and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil n' doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

### Radiation Exposure Statement:

The baby unit complies with FCC/ISED radiation exposure limits set forth for an uncontrolled environment. The baby unit should be installed and operated with minimum distance 20cm between the radiator & your body.

The parent unit has been tested and comply with FCC and ISED SAR limits.

### Déclaration d'exposition aux radiations:

L'unité bébé est conforme aux limites d'exposition aux rayonnements FCC / ISED établies pour un environnement non contrôlé. L'unité bébé doit être installée et utilisée avec une distance minimale de 20 cm entre le radiateur et votre corps.

L'unité parent a été testée et est conforme aux limites SAR FCC et ISED.

---

## 9. Technical Specifications

Frequency	2400 MHz to 2483.5 MHz
Operating Temperature	41°F - 104°F
Display	4.3" diagonal TFT LCD
BABY UNIT Power Adapter:	BECKY - BQ05A-0501000-U Input: 100-240V AC, 50/60Hz, 300mA; Output: 5.0V DC, 1000mA or YWK - YWK-AD050100-U Input: 100-240V AC, 50/60Hz, 300mA; Output: 5.0V DC, 1000mA
PARENT UNIT Power Adapter:	BECKY - BQ05A-0501000-U Input: 100-240V AC, 50/60Hz, 300mA; Output: 5.0V DC, 1000mA or YWK - YWK-AD050100-U Input: 100-240V AC, 50/60Hz, 300mA; Output: 5.0V DC, 1000mA
PARENT UNIT Battery (built-in)	ZhongShan TianMao Battery Co., Ltd. 5C, 3.7V, 1200mAh Lithium-Ion Polymer, re-chargeable battery pack

### **WARNING**

*Use only with provided power supply.*

### **WARNING**

*Do not attempt to replace the battery, but contact customer Service if it needs replacing.*

< This page has been intentionally left blank >

## **EU Declaration of Conformity (DoC)**

Hereby, Meizhou Guo Wei Electronics Co. LTD declares that the product is in compliance with RE Directive 2014/53/EU. The full text of the EU declaration of conformity is available on the website: [motorolanursery.com](http://motorolanursery.com)

Manufactured, distributed or sold by Meizhou Guo Wei Electronics Co. LTD., official licensee for this product. MOTOROLA and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. and are used under license. All other trademarks are the property of their respective owners. © 2021 Motorola Mobility LLC.  
All rights reserved.

Version 3 (EN-EU&US)

