

NDS **SUNCONTROL²**




User manual



Valid for the following models

SC320M
SC350M

INSTRUCTIONS FOR THE PROPER DISPOSAL

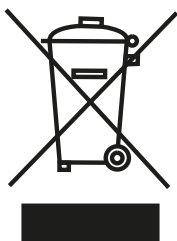

This electronic product is subject to the European Directive 2012/19 / EU. Comply with local waste disposal regulations, do not dispose of old products with normal household waste. The proper disposal of products that can no longer be used prevents potential negative consequences for the environment and for the population.



INDEX

1. SAFETY INSTRUCTIONS	2
2. PACKAGE CONTENTS	3
3. DESCRIPTION	3
4. OPERATIONS	5
5. INSTALLATION	6
6. CHARGING CURVE SELECTION	8
7. LED INDICATORS	10
8. FUSE REPLACEMENT	11
9. TECHNICAL FEATURES	12
10. F.A.Q.	14
11. WARRANTY	15



1. SAFETY INSTRUCTIONS

- Child Safety: Keep the device Out of Reach.
- Carefully check the integrity of the device and connectors.
- To avoid overheating and possible fires do not install the device in a sealed environment, Always choose a well ventilated area.
- Do not place the device on highly flammable surfaces or environments (eg: paper, cloth, etc.).
- Do not cover the cooling slits on the side and the fan on the top.
- Do not install the device near flooded batteries: they produce flammable, corrosive and explosive gas while working, and it can damage the product.
- protect the device from sunlight or direct sources of heat.
- To avoid malfunctions, DO NOT install and use the device in very humid environments, in contact with water splashes, various liquids, or exposed to rain.
- To avoid risk of electric shock and/or fire, the vehicle's fuel system must be in good condition.
- In case of damaged connecting cables or inadequate section, immediately replace them with suitable cables as specified by this manual or by a qualified electrician.
- In case of anomalies in the conformity of the product do not use it! it is strictly forbidden to open the device. Repairs may only be carried out by qualified technical personnel using original spare parts.
- Keep the instruction manual near the device for easy access to the essential safety, use and maintenance information.
- The information contained in this manual may be changed without notice. NDS Energy s.r.l. reserves the right to make changes and improvements to the product at any time without notice and without obligation to apply these changes to the devices previously distributed.
- The images of the products are purely indicative and may therefore not be fully representative of the

characteristics of the product, differing in colour, size or accessories.

2. PACKAGE CONTENTS

Check the contents of the package:

- N°1 **SUNCONTROL2**
- N°1 Replacement fuse
- Wall mounting screws

3. DESCRIPTION

SUNCONTROL2, the automatic solar regulator with **MPPT** technology to push the efficiency of photovoltaic modules to the maximum: more energy, less space.

The **MPPT** algorithm always uses the "maximum power peak" delivered by the panel, with a significantly higher performance than the PWM technology (up to 25% more).

SUNCONTROL2, available in two models SC320M and SC350M, manages (depending on the model), up to 350W input, with a maximum charge of 25A. The new microprocessor, equipped with **OPTICHARGE** firmware, performs up to 6 charging phases, including desulphation and maintenance phases, for optimal recharging of the on-board batteries.

SUNCONTROL2 is compatible with the following battery technologies: Free Acid, GEL, AGM and LiFePO₄ and both the leisure batteries and the starter battery can be recharged.

The **state of charge (SoC)** of both connected batteries is immediately visible on top of the device thanks to the two multicolored LEDs.

The system works with a 12V nominal voltage and it is possible to connect two photovoltaic panels, on separate inputs, with a maximum power of 180Wp (depending on the model).

The **Dip Switch selector**, located next to the power connections, allows you to select the output charge curve in a simple and fast way.

The **touch screen display DT002 (optional)** with new management software, allows you to view the charge information and set the various settings with the new communication protocol NDS.

MAIN FEATURES

- **MPPT** technology (+25% performances)
- Charging curve selection: Wet, GEL, AGM e LiFePO₄
- New Firmware **OPTICHARGE**
- Up to **6 charging phases**
- Starting battery charge
- Desulphation curve
- **Independent inputs** for 2 solar panels
- **SoC Quick view** with status LEDs.
- Touch screen Display (Optional)

4. OPERATIONS

SUNCONTROL2, charges up to two batteries: one service battery (B1) and one starter battery (B2), with priority charging to the service battery.

SUNCONTROL2 will start charging the batteries if the following conditions are satisfied:

1. The connected Solar Panels deliver a voltage 1V higher than the voltage of the batteries to be recharged.
2. Battery voltage higher then 8V.

The **Leisure Battery** will be charged with the selected curve.

The **Starting Battery** will be charged if the following conditions are satisfied:

- Leisure battery charged between 80% and 100%.
- Starting battery with voltage under 12,5V.


Every charging phase have a **maximum run time**, with the exception of the maintenance phase, which constantly monitors the state of charge and, if necessary, delivers an impulse current to keep the battery 100% charged.

NOTE

If the photovoltaic panels interrupt the power supply (during night, shadowed solar panel, etc. ...) the system goes into Stand-By mode: LEDs off and self-consumption to the minimum (<2mA).

5. INSTALLATION

Place the **SUNCONTROL2** on the chosen surface and secure the entire device using the fixing holes integrated in the shell with the supplied screws or equivalent (Fig.1).

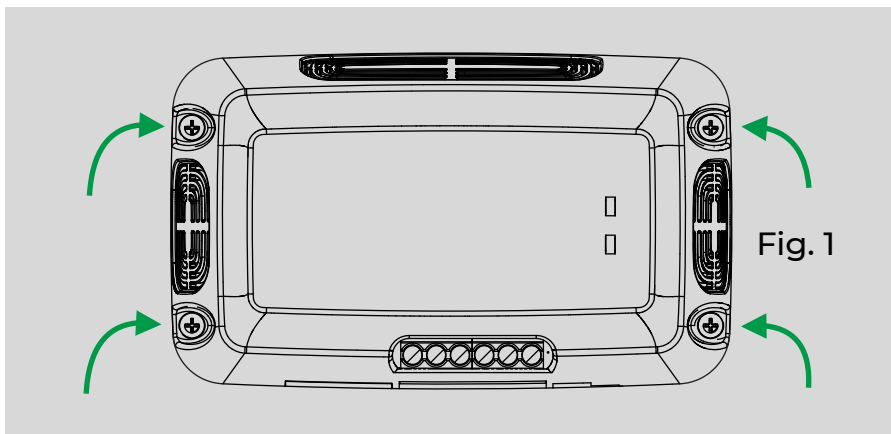


All electrical and setup connections are on the front, it is not necessary to disassemble the plastic shells, except for the protection fuse replacement.

On the front side, after the power connections, there's a **Dip Switch** for the **charging curve** selection, it's important to select the correct curve according to the type of battery supplied, for the selection of the correct curve please refer to the chapter "Charging curve selection".

NOTE

The optional DT002 display allows you to change parameters and charging curves. If connected, the display will receive the parameters set on the Dip Switch, further changes will be made only on the display DT002.

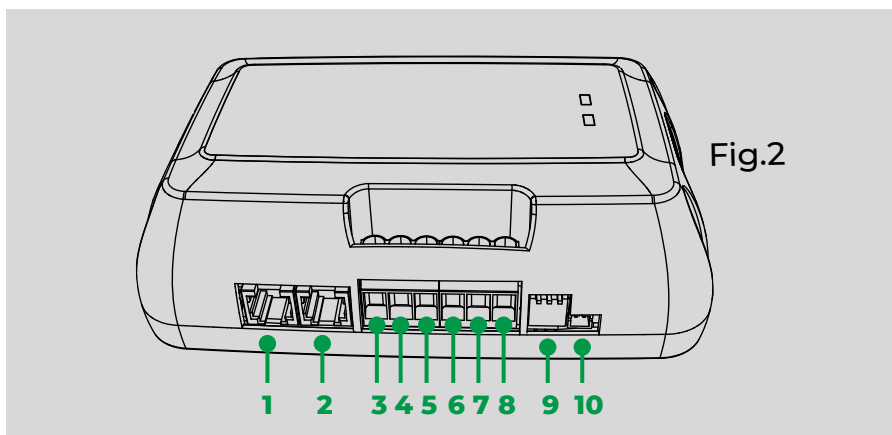









N° PIN	CONNECTION
1	Display Connection
2	Secondary connection (for future connections)
3	Solar Panel Negative poles
4	Batteries Negative poles
5	Solar Panel 1 Positive pole
6	Solar Panel 2 Positive pole
7	Leisure battery Positive pole (B1)
8	Starting battery Positive pole (B2)
9	Dip Switch - Charging curve selection
10	Temperature sensor connection for B1 (optional)

CAUTION

- For electrical connections, use cables of appropriate cross-section: from 6 mm².
- In case of a **long stay**, it is advisable to disconnect the negative cable from the device to completely neutralize any residual consumption that may inadvertently discharge the leisure battery.

6. CHARGING CURVE SELECTION


The Dip Switches, located next to the power connections, allow you to select the proper charging curve for the installed services battery, use the table to set the correct curve for your battery. The Dip Switches affect the B1 charging curve (leisure battery), not B2 (starter battery). The B2 charging curve is preset to curve N°4 (wet - desulphation OFF).

CURVE NUMBER	SWITCH SETTING	CURVE TYPE	CHARGING DATA
0	 1 = OFF 2 = OFF 3 = OFF	GEL Desulphation OFF	Vmax = 14,3V Vmaint = 13,6V
1	 1 = ON 2 = OFF 3 = OFF	GEL Desulphation ON	Vmax = 14,3V Vmaint = 13,6V Vdes = 15,8V
2	 1 = OFF 2 = OFF 3 = ON	AGM Desulphation OFF	Vmax = 14,8V Vmaint = 13,8V
3	 1 = ON 2 = OFF 3 = ON	AGM Desulphation ON	Vmax = 14,8V Vmaint = 13,8V Vdes = 15,8V
4	 1 = OFF 2 = ON 3 = OFF	Wet Desulphation OFF	Vmax = 14,4V Vmaint = 13,5V
5	 1 = ON 2 = ON 3 = OFF	Wet Desulphation ON	Vmax = 14,4V Vmaint = 13,5V Vdes = 15,8V
6	 1 = OFF 2 = ON 3 = ON	LiFePO₄ Lithium Maintenance OFF	Vmax = 14,6V
7	 1 = ON 2 = ON 3 = ON	LiFePO₄ Lithium Maintenance ON	Vmax = 14,6V Vmaint = 13,7V

NOTE

- The default setting is Curve 0, for GEL batteries - desulphation OFF.
- In order to safeguard the battery, with an ambient temperature below 0°C, the LiFePO₄ charge curve will not be started.

CHARGING CURVE

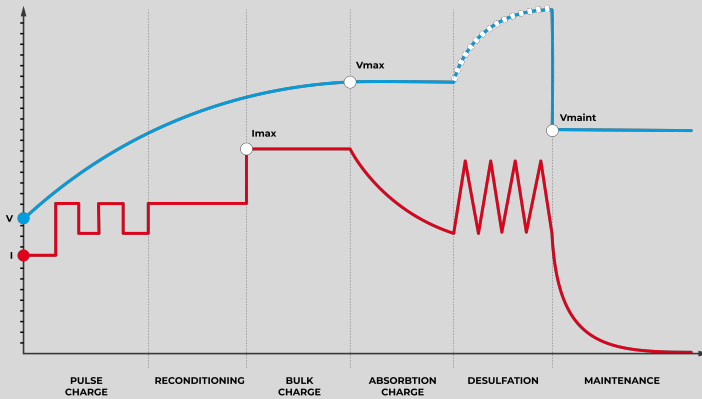

B1 - PHASE DISCUSSION

PULSE CHARGE	With voltage between 8V and 10.5V, a current between 1A and 2A will be delivered, every 5 seconds. Timeout 4 hours.
RECONDITIONING	With voltage between 10.5V and 12.0V, an approximately 2A constant current will be delivered. Timeout 8 hours.
BULK CHARGE	With voltage between 12V and V_{max} (Maximum voltage of the selected charging curve), will be delivered a constant current of: 20A model SC320M and 25A model SC350M.
ABSORPTION CHARGE	With battery voltage equal to V_{max} (Maximum voltage of the selected charging curve), will be delivered a constant voltage equal to the selected curve V_{max} . The delivered current will decrease as the battery state of charge increases till about 3A. Timeout 6 hours.
DESULPHATION (ONLY IF SELECTED)	An approximately 2A constant current will be delivered, allowing the battery voltage to rise independently to the maximum value of 15.8V. This phase ends to the achievement of 15.8V. Timeout 2 hours.
MAINTENANCE	This phase keep a constant voltage related to the selected charging curve (V_{maint}). This phase has a 4 hours timeout for the LiFePO_4 charging curve with maintenance ON (curve N°7), while for the other curves there's no time limit. If during the maintenance phase the voltage should fall below 13.15V for LiFePO_4 curve and 12.65V Wet curve and 12.8V and for the other curves, charge will be restarted from the first phase. Timeout 4 hours.

B2 - PHASE DISCUSSION

PULSE CHARGE	With voltage between 8V and 10.5V, a variable current between 1A and 2A, every 5 seconds. Timeout 4 hours.
RECONDITIONING	With voltage between 10.5V and 12.0V, an approximately 2A constant current will be delivered. Timeout 8 hours.
BULK CHARGE	With battery voltage between 12V and 14,4V, will be delivered a 5A constant current.
ABSORPTION CHARGE	With battery voltage 14,4V will be delivered a 14,4V constant voltage. The delivered current will decrease as the battery state of charge increases till about 3A. Timeout 6 hours.
MAINTENANCE	This phase keep a constant voltage of 13,5V. Timeout 8 hours.

7. LED INDICATORS

The two LEDs on the upper part of the device, marked B1 and B2, allow you to quickly understand the charge status of the connected battery.

Each LED can emit different colors referred to a precise state of charge of the battery, the table below explains the relationship between the LED color and the battery state of charge.


SIGNAL	MEANING
Red LED	Charging
Orange LED	Reconditioning
Green LED	Fully charged / Maintenance

CAUTION

A fast flashing of both LEDs (with the solar panel active) shows an error due to the internal fuse breaking, or services battery voltage below 6V.

8. FUSE REPLACEMENT

If the protective fuse on the **SUNCONTROL2** electronic board is damaged, it can be replaced with the original replacement fuse (supplied) or with a common 25A (for SC320M) or 30A (for SC350M) automotive fuse.

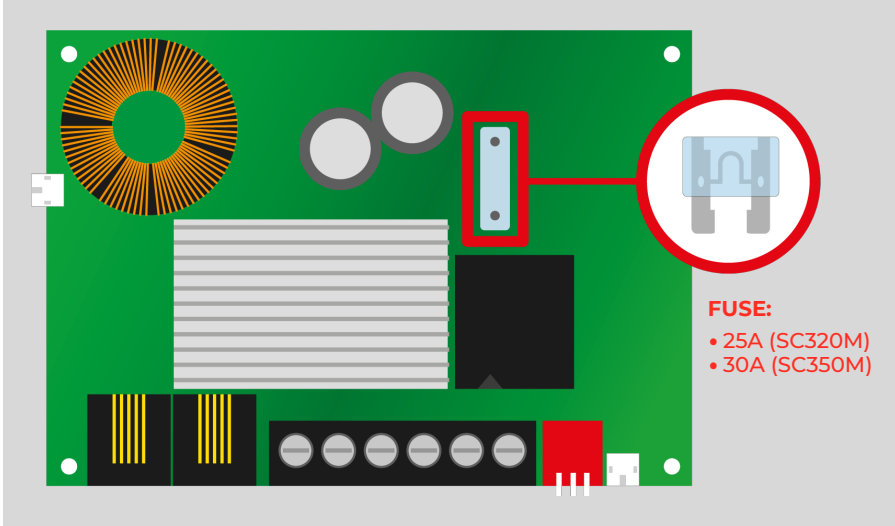

Follow these steps to reach the fuse:

1. Remove **SUNCONTROL2** from its housing.
2. Rotate the device to reveal the screws on the bottom of the device.
3. Unscrew the 4 screws.
4. Remove the front shell of **SUNCONTROL2** to access the fuse.
5. Replace the fuse.

9. TECHNICAL FEATURES

DESCRIPTION	SC320M	SC350M
INPUTS		
Maximum input Voltage solar panels (open circuit voltage)	29,5V	29,5V
Solar Panel input Connections	2	2
Solar Panel input Maximum Power Supported	50W - 160W	50W - 180W
OUTPUT B1		
Battery nominal voltage	12V	12V
Charging current maximum output	20A	25A
Minumum battery capacity required Lead-acid	60Ah	80Ah
Minumum battery capacity required LiFePO ₄	40Ah	50Ah
Mimumum battery voltage required	8V	8V
Charging curve selector/Curves number	Yes/8	Yes/8
Temperature regulated fan speed	No	Yes
Temperature regulated charging (by temperature sensor for B1 battery - optional)	Yes/-30mV/°C	Yes/-30mV/°C

OUTPUT B2		
Battery nominal voltage	12V	12V
Charging current maximum output	5A	5A
Minumum battery capacity required Lead-acid/LiFePO ₄	15Ah/10Ah	15Ah/10Ah
Minimum/maximum voltage starting charge	8V / 12,5V	8V / 12,5V
Maximum charging voltage	14,4V	14,4V
Temperature regulated fan speed	No	Yes
Maximum charging timeout	8h	8h
GENERAL		
Charging algorithm OPTICHARGE	Yes	Yes
Stand-by self-consumption	<2mA	<2mA
Display connection	Yes	Yes
Internal protection fuse	25A	30A
Reverse polarity protection	Yes	Yes
Night-time discharge protection	Yes	Yes
Overload protection	Yes	Yes
Overheating protection (output power reduction)	Yes	Yes
Size (mm)	123 x 108 x 50	123 x 108 x 50
Weight (cables excluded)	400g	420g
Working temperature	-20°C/+50°C	-20°C/+50°C
Ambient humidity	<90% no condensation	<90% no condensation
Maximum altitude	3000m (maximum nominal output up to 2000m)	3000m (maximum nominal output up to 2000m)

10.F.A.Q.

- **About solar panels, what's the maximum voltage supported by SUNCONTROL2?**

Maximum supported voltage is 29,5V.

- **Is it possible to connect one 200W solar panel only, on a single SUNCONTROL2 connection?**

It's possible to connect just one bigger solar panel (200W), for example on SUNCONTROL2 Pin N°5, but you must connect Pin N°5 and Pin N°6.

Use, at least, a 6 mm² cross-size cable.

- **Is it normal to have a battery voltage (with solar regulator working) over 15V?**

It's normal when the device is in desulphation mode. It is possible to turn OFF the desulphation selecting the proper charging curve: look at the chapter "Charging curve selection".

11. WARRANTY




WARRANTY COUPON

MODEL_____

SERIAL NUMBER_____

PURCHASE DATE_____

SELLER'S STAMP AND SIGNATURE

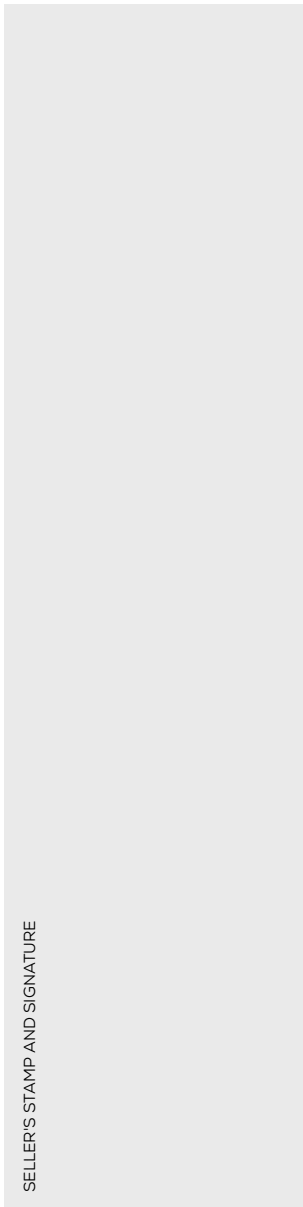

NDS ENERGY S.R.L.

VIA G. PASCOLI, 169

65010 CAPPELLE SUL TAVO (PE)

ITALY

EMAIL: CUSTOMER@NDSENERGY.IT

TEL: +39 085 4470396

FAX: +39 085 9112263

NOTES

NOTES



TUTTA L'ENERGIA CHE TI SERVE
ALL THE ENERGY YOU NEED



0037_MANB_Sc320_Sc350_GB02

NDS ENERGY S.R.L.

VIA PASCOLI, 169

65010 CAPPELLE SUL TAVO (PE) ITALY

TEL.: +39 085 4470396

WEB: WWW.NDSENERGY.IT

EMAIL: CUSTOMER@NDSENERGY.IT



LIKE US: [FACEBOOK.COM/NDSENERGYSRL](https://www.facebook.com/NDSENERGYSRL)